

Basic Dolly Operation : (Model 10 or 11)

The camera dolly needs hydraulic pressure for any *up* boom movement. Hydraulic pressure is also used to assist you in shifting between CRAB, REAR, or ROUND steer modes. It has no function in steering, braking or the rolling of the dolly.



